

SECTION 5

TELEPHONE AND INFORMATION

Telephone and information

• Telephone (Hands-free system for cellular phone)	136
Enter a Bluetooth phone	140
Call on the Bluetooth phone	145
Receive on the Bluetooth phone	152
Talk on the Bluetooth phone	152
• Fuel consumption	155
Past record	155
Consumption	156
• Calendar	157
• XMr NavWeather	158

Telephone (Hands-free system for cellular phone)

Hands-free system allows you to make or receive a call without taking your hands off the steering wheel by connecting your cellular phone.

This system supports Bluetooth®. Bluetooth® is a wireless data system by which you can call without your cellular phone being connected with a cable or placed on a cradle.

If your cellular phone does not support Bluetooth®, this system can not function.

The operating procedure of the phone is explained here.

For registering and setting of the phone, see "Telephone settings" on page 338.



CAUTION

While driving, do not use a cellular phone or connect the Bluetooth® phone.

NOTICE

Do not leave your cellular phone in the car. The temperature indoor may be high and damage the phone.

INFORMATION

- *In the following conditions, the system may not function.*
 - *The cellular phone is turned off.*
 - *The current position is outside the communication area.*
 - *The cellular phone is not connected.*
 - *The cellular phone has a low battery.*
- *Even if your cellular phone supports both hands-free and audio Bluetooth® connections, it may not be able to connect to the hands-free connection at the same time.*
- *When using Bluetooth® audio and hands-free at the same time, the following problems may occur.*
 - *The Bluetooth® connection may be cut.*
 - *Noise may be heard on the Bluetooth® audio playback.*



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

INFORMATION

This system supports the following service.

- **Bluetooth® Specification**
Ver.1.1 or higher
(Recommended: Ver.2.0+EDR or higher)
- **Profiles**
 - **HFP (Hands Free Profile)**
Ver.1.0 or higher
(Recommended: Ver.1.5 or higher)
 - **OPP (Object Push Profile) Ver.1.1**
 - **PBAP (Phone Book Access Profile) Ver.1.0**

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP or PBAP service individually.

Please go to “<http://www.lexus.com/>” to find approved Bluetooth® phones for this system.



By pushing the telephone switch above, you can receive a call or hang up without taking your hands off the steering wheel.



► Microphone

You can use the microphone above when talking on the phone.

The other party's voice outputs from the front speaker. When the received calls or received voice outputs, the audio from the audio system or voice guidance from the navigation system will be muted.

INFORMATION

- *Talk alternately with the other party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)*
- *Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When you talk on the phone, speak clearly towards the microphone.*
- *In the following situations, your voice may not reach the other party.*
 - *Driving on unpaved road. (Making a traffic noise.)*
 - *Driving at the high speed.*
 - *The window is open.*
 - *Turning the air-conditioning vents towards the microphone.*
 - *The sound of the air-conditioning fan is loud.*
 - *There is an effect from the network of the cellular phone.*



- 1** Indicates the condition of Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of voice quality.

BT : No connection to Bluetooth®.

- 2** Indicates the amount of battery charge left.



Empty ←→ Full

This is not displayed when the Bluetooth® is not connected.

The amount left does not always correspond with the one of your cellular phone. The amount of battery charge left may not be displayed depending on the phone you have. This system doesn't have a charging function.

- 3** Indicates the receiving area.

“Rm” is displayed when receiving in Roaming area.

“Hm” is displayed when receiving in Home area.

The receiving area may not be displayed depending on the phone you have.

4 Indicates the level of reception.



The level of reception does not always correspond with the one of your cellular phone.

The level of reception may not be displayed depending on the phone you have.

When you are out of the service area or in a place inaccessible by radio waves, "No Service" is displayed.

An antenna for the Bluetooth® connection is built in the instrument panel. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or is covered with metal materials.

Leave the Bluetooth® phone on the place where "Blue" indication is displayed.

About the phonebook in this system

The following data is stored for every registered phone. When another phone is connecting, you cannot read the registered data.

- Phonebook data
- Voice tag
- All of call history
- Speed dial

When you delete the phone, the above-mentioned data is also deleted.

When you release your car:

A lot of personal data is registered when you use the Hands-free system. When you release your car, initialize your data. (See "● Delete personal data" on page 322.)

If you initialize it, the former state will never come back again. Pay much attention when initializing the data.

You can initialize the following data in the system.

- Phonebook data
- Call history data
- Speed dial data
- Voice tag data
- Bluetooth® phone data
- Volume setting
- Details setting

FCC ID : AJDK021
IC : 775E-K021 Canada 310

This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

— Enter a Bluetooth® phone

 
To use the hands-free system, you need to enter your phone into the system. Once you have registered it, you can make a hands-free call.

If you haven't yet registered any Bluetooth® phones, you must first register your phone according to the following procedure.

Please see “• Registering a Bluetooth® phone” on page 340 of additional registration when registering.



1. Push the “MENU” button and select “Info./Phone”.

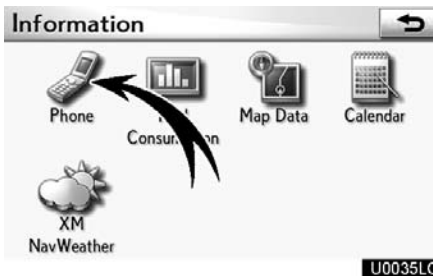

2. Select “Phone”.



3. Select “Yes” to connect your phone.



4. When this screen is displayed, input the passcode displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

If you want to cancel it, select “Cancel”.



 
5. When the connection is completed, this screen is displayed.

You do not need to enter the phone in case of using the same one.




When this screen is displayed, follow the guidance on the screen to try again.

- **Connecting a Bluetooth® phone
AUTOMATICALLY**

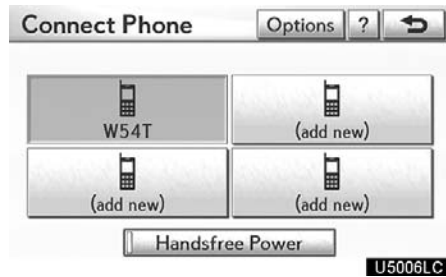

 When you register your phone, auto connection will be turned on. Always set it to this mode and leave the Bluetooth® phone in a condition where connection can be established.

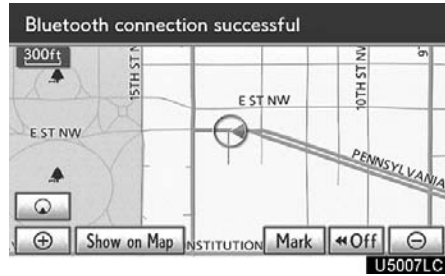

When the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode, a nearby cellular phone you have registered is searched for.

Next, the system automatically connects with the latest of the phones connected to in the past.

Then, the connection result is displayed.

This screen appears when the Bluetooth® phone is first connected after the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode.

INFORMATION

It may take time, the phone connection is carried out during Bluetooth® audio play.

MANUALLY

 
When the auto connection has failed or “Handsfree power” is turned off, you have to connect Bluetooth® manually.

1. Push the “MENU” button and select “Info./Phone”.

2. Select “Phone”.



3. Select “Connect Phone”.

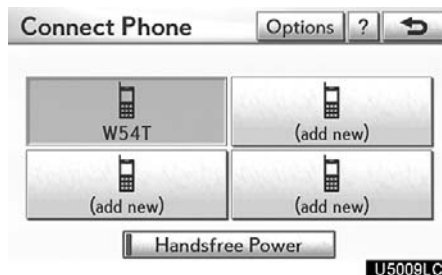

4. Select “Handsfree Power”, or select the phone to connect.



5. The “Connect Bluetooth*” screen is displayed.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



6. When the connection is completed, this screen is displayed.

Now you can use the Bluetooth® phone.

When you connect the phone while Bluetooth® audio is playing



This screen is displayed, and the Bluetooth® audio will stop temporarily.

- **Reconnecting the Bluetooth® phone**

If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode, the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone off, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

— Call on the Bluetooth® phone


After you enter the Bluetooth® phone, you can call by using hands-free system. You can call using the 6 methods described below.

 
- By dial

You can call by inputting the phone number.

This cannot be operated while driving.

1. Push the “MENU” button and select “Info./Phone”.

You can also push  of the steering wheel to display the “Phone” screen.

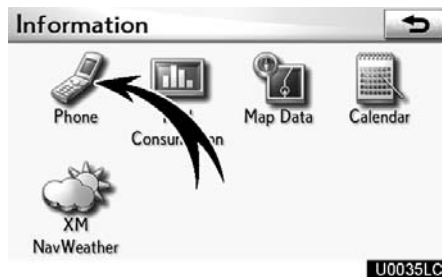



2. Select “Phone”.



3. Select the desired key to input the phone number.

Each time you select , an inputted digit is deleted.

When you select “**Redial**”, the number you called last is inputted.

Select  or push  of the steering wheel.

TELEPHONE AND INFORMATION

- **By phonebook**

 
You can call by phonebook data which is transferred from your cellular phone.

The system has one phonebook for each telephone. You can register up to 1000 numbers in total of phonebooks.


This cannot be operated while driving.



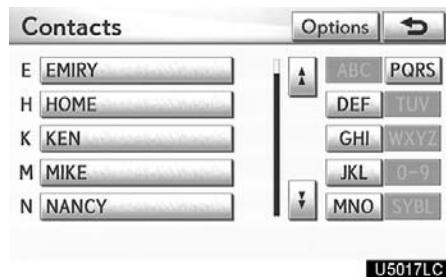

 1. Select "Contacts".

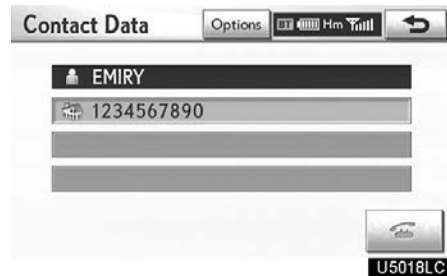

2. Select the desired data from the list.



3. Select the desired number from the list.

Select  or push  of the steering wheel.

When the phonebook is empty



1. Select "Contacts".



2. Select "Yes" if you want to transfer new contacts from a cellular phone.

Select "No" if you want to edit the phonebook.

 
• By speed dial

You can call using registered phone numbers which can be selected from a phonebook. (See "• Registering the speed dial" on page 358 for registering the speed dial.)

This can be done while driving.



1. Select "Speed Dials".

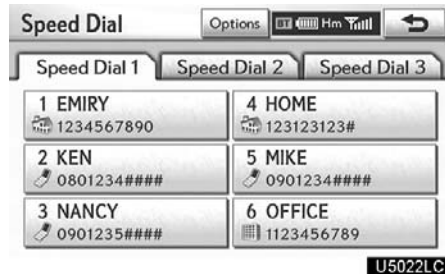

2. Select the desired number to call.

You can change the page by selecting "Speed Dial 2" or "Speed Dial 3" tab.

TELEPHONE AND INFORMATION

- **By call history**

You can call by call history which has 4 functions below.

All: all the numbers above which were memorized

Missed: calls which you missed

Incoming: calls which you received

Outgoing: numbers which you called

You can call using the latest 5 call history items shown by “All” while driving.



U5023LC

1. Select “Call History”.



U5024LC

2. Select the desired data from the list.






When the list is switched, select “All”, “Missed”, “Incoming” or “Outgoing” tab.



U5025LC

3. Select  **or push**  **of the steering wheel.**

You can call using the latest call history item.

1. Push  of the steering wheel to display the “Phone” screen.
2. Push  of the steering wheel to display the “Call History” screen.
3. Push  of the steering wheel to select the latest history item.
4. Select  or push  of the steering wheel to call the latest history item.
 - When you call by phonebook, the name (if registered) is displayed.
 - When you call the same number continuously, only the newest number is registered.
 - When a phone number registered in the phonebook is received, the name and the number are displayed.
 - Unnoticed phone number such as a public phone is not memorized in the system.
 - A international phone call may not be made depending on the cellular phone which you have.

- By voice recognition



You can call by giving a command. (For the operation and command of voice recognition, see “Speech command system” on page 49.)

This can be operated while driving.

The “Dial by Name” operating procedure is explained here.

Other operating procedures are also similar.

TELEPHONE AND INFORMATION

DIALING BY NAME

You can call by giving a voice tag registered in the phonebook. For setting the voice recognition, see “—Setting the voice tag” on page 365.

When you select “English” of “Language”, you can call by giving a name registered in the phonebook.

For setting the voice recognition, see “● Registering the phonebook data” on page 351.


Example: Call MIKE.



- You: Push the talk switch.
- System: “After the beep, please say a command.” “Such as “Go Home”, “Destination”, “Phone”, “Audio”, “Information” or “Command List”.
“(beep)”
- You: “Phone.”
- System: “Phone.”
“Say a command.” “Such as “Dial by Number”, “Dial by Name”, “Redial”, “Call Back” or “Connect Phone”.
“(beep)”
- You: “Dial by Name.”
- System: “Dial by Name.” “Say a name from your contact list.”
“(beep)”


You: "MIKE."
 System: "MIKE." "Say the type of number." "Such as "Mobile", "Home", "Work" or "Other"."
 "(beep)"
 You: "Home."
 System: "MIKE." "Home."
 "Push the off-hook switch to dial or say "Dial"."
 "(beep)"
 You: "Dial."
 System: "Dial."
 Now, you can call MIKE.

Calling without the voice recognition


After the entry number is displayed, you can also call by pushing  of the steering wheel or selecting "Dial".

Cancelling the voice recognition


The voice recognition will be cancelled when you do the following.

- Keep on pushing the talk switch.
- Push  of the steering wheel.
- Select "Cancel". (Except for recognizing the command.)
- Say "Cancel".

● By POI* call

Information	
Name: CAFE PHILLIPS	
Address: 1200 E ST NW WASHINGTON, DC	
Position: N38°53'45"	W77°1'41"
Phone #: 202-408-4900	
Mark	Enter 



U5041LC

You can call by selecting  when it is displayed on the screen from navigation system. (See "POI INFORMATION" on page 41 for details.)



*: Point of Interest

— Receive on the Bluetooth® phone



When a call is received, this screen is displayed with a sound. Select  or push  of the steering wheel to talk on the phone.

To refuse to receive the call:

Select  or push  of the steering wheel.

To adjust the volume of received call:

Select “—” or “+” or use the volume switch of the steering wheel.

On the international phone call, the other party's name may not be displayed correctly depending on the cellular phone which you have.

— Talk on the Bluetooth® phone





While you are talking on the phone, this screen is displayed. You can do the operation below on the screen.

To adjust the volume of the other party's voice:

Select “—” or “+” or use the volume switch of the steering wheel.

To hang up the phone:

Select  or push  of the steering wheel.

To mute your voice:

Select “**Mute**”.

To input a Key:

Select “**0-9**”.

To transfer the call:

Select “**Call Transfer**”.

You cannot change from Hands-free call to cellular phone call while driving.

When you change from cellular phone call to Hands-free call, the Hands-free screen will be displayed and you can operate it on the screen.

Transferring method and behavior are different depending on the cellular phone which you have.



For the operation of the phone, see the manual that comes with your cellular phone.

When you select “0–9”



Select the desired number to input the key.

To hang up the phone:

Select  or push  of the steering wheel.

This cannot be operated while driving.





If the continuous tone signal is registered in a phonebook, this screen appears. (If not registered, “Send” and “Exit” are not displayed.)

Confirm the number displayed on the screen and select “Send”. The number before marked sign will be sent.

When you select “Exit”, this function will be finished and normal tone screen appears.

 
To hang up the phone:

Select  or push  of the steering wheel.

The continuous tone signal is the marked sign (p or w) and the number following phone number. (ex. 056133w0123p#1*)

You can do this operation when you want to operate an answering machine or use a telephone service in bank for example. You can register the phone number and the code number in the phonebook.

- By voice recognition

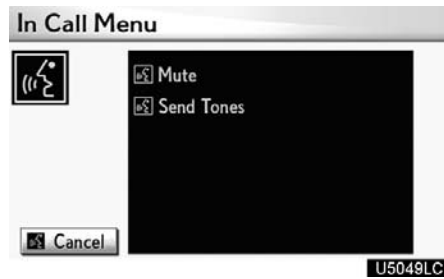



You can operate “Mute” and “Send Tones” by giving a command during a call.



The operating procedure is similar to other voice recognition. (For the operation of voice recognition, see “Speech command system” on page 49.)

- Interrupt call





When the call is interrupted by the third party while talking, this screen is displayed.

Select  or push  of the steering wheel to start talking with the other party.

Select  or push  of the steering wheel to refuse the call.



Everytime you select  or push  of the steering wheel while interrupt call, the other party will be switched.

 
If your cellular phone is not accepted for HFP Ver. 1.5, this function can not be used.

INFORMATION


Interrupt call operation may differ depending on your phone company and cellular phone.

Fuel consumption — — Past record

Fuel consumption information from recent resets will be displayed.

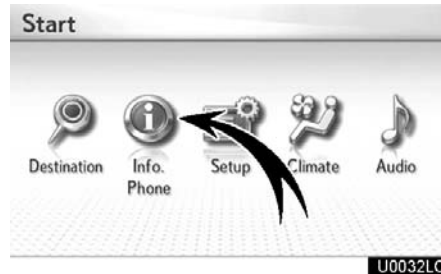


 1. Push the “MENU” button and select “Info./Phone”.

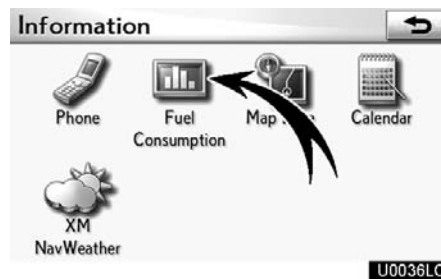

2. Select “Fuel Consumption”.

 If the “Past record” screen does not appear, select **“Past record”**.

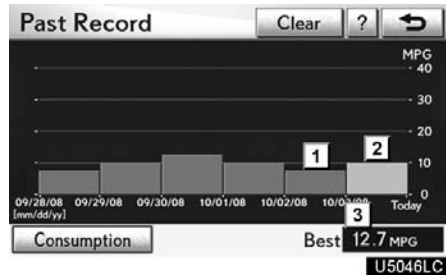

“Past record” screen will be displayed.

- 1** Fuel economy since the last reset
- 2** Current fuel economy
- 3** Best recorded fuel economy

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last reset.

Reset the average fuel consumption to measure the current fuel consumption again. For more information on resetting fuel consumption, see the vehicle owner's manual.

Past record data can be deleted by selecting **“Clear”**.

— Consumption

The average fuel consumption of the last 30 minutes will be shown in one-minute blocks.

 
1. Push the “MENU” button and select “Info./Phone”.

2. Select “Fuel Consumption” on the “Information” screen.

If the “Consumption” screen does not appear, select **“Consumption”**.

Calendar

To view calendar.

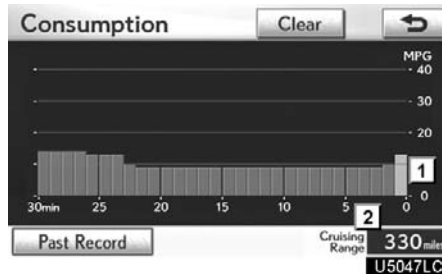


“Consumption” screen will be displayed.


- 1 Fuel consumption in the past 30 minutes
- 2 Cruising range

Average fuel consumption is divided by color into past averages and averages attained since the “ENGINE START STOP” switch was last turned to IGNITION ON mode.

 Consumption data can be deleted by selecting “Clear”.

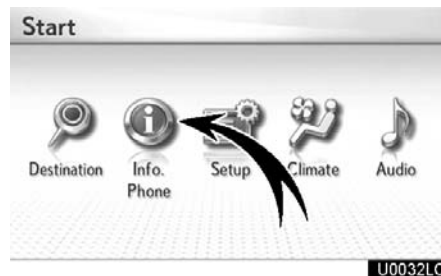

 1. Push the “MENU” button and select “Info./Phone”.

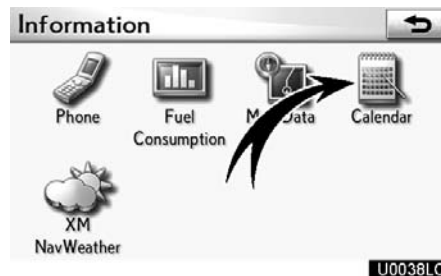

2. Select “Calendar”.



On this screen, the current date is highlighted in yellow.

▲ M or ▼ M : To change month.

▲ Y or ▼ Y : To change year.

“Today”: To display the current month calendar (if another month will be displayed).

XM® NavWeather

The XM® NavWeather service that allows the navigation system to display weather information on the map is available if your satellite radio tuner can receive weather information.

To receive the XM® NavWeather service, a subscription to the XM® Satellite Radio with NavWeather is necessary.

The XM® NavWeather is available in the contiguous 48 U.S. states. For details about the XM® NavWeather service coverage area, refer to www.xmradio.com.

- How to activate the XM® NavWeather service

To receive the XM® NavWeather service, it is necessary to activate the service. To activate the service, an extra fee is required in addition to subscription fees for the XM® Satellite Radio. For details about service activation, call XM® Listener Care Center at 1-877-515-3987.

Customers should have their radio ID ready; the radio ID can be found by selecting "channel 000" on the radio. For details, see "(b) Displaying the radio ID" on page 181.

XM® Satellite Radio has the responsibility for all fees and service, they are subject to change.

The following operations can be performed.

- **Show XM® NavWeather information**

Weather forecast information is displayed on the map. (See page 159.)

 
- **Weather information**

Weather information for the selected city is displayed. (See page 161.)


- **Weather warnings**

Weather warnings issued within a 62 mile (100 km) diameter (approximately) around the vehicle are displayed on the warning screen. (See page 161.)

● Show XM® NavWeather information

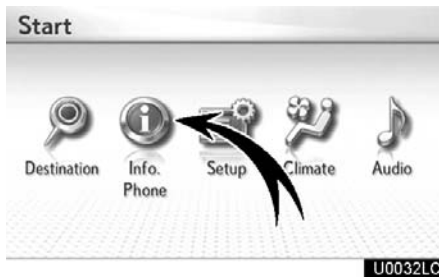

 1. Push the “MENU” button and select “Info./Phone”.

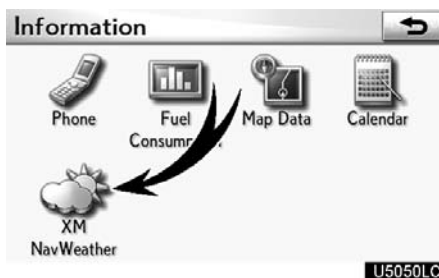

2. Select “XM NavWeather”.

XM® NavWeather screen is displayed on the screen.

XM® NavWeather SCREEN



1 “Info.” button

 
When the city icon button is selected, the “Info.” button will be displayed on the screen. Selecting this button displays the “Forecast” screen. (See page 161.)

2 City icon

When this button is selected, city names and the “Info.” button will be displayed on the upper part of the screen.

3 “Forecast” button

When this button is selected, the city selection screen will be displayed.

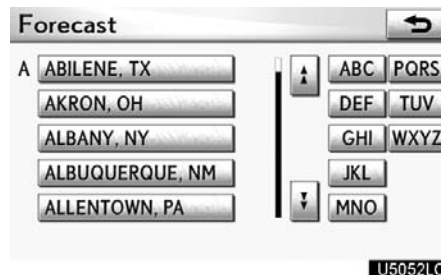

Select a city to display weather information. Weather information of the selected city will be displayed. (See page 161.)

4 “Current Location” button

When the “Current Location” button is selected, a map of the vehicle’s current location will be displayed.



TELEPHONE AND INFORMATION






5 Zoom in/out button

The scale of the map can be changed. Three zoom levels can be selected; 16 miles (26 km), 32 miles (50 km) and 64 miles (100 km).


6 Weather icons and grids

Inclement weather information is displayed on the map using weather icons and grids. Selecting an icon shows the related information at the top of the screen.

Icon	Weather
	Heavy snow
	Heavy rain


Icon	Weather
	Tornado
	Hurricane
	Storm
	Flood
	Winter
	Wind
	Extremes
	Other
	Hail storm
	Shear storm
	Heavy fog
	Heavy freezing rain/ice

 ● Weather information

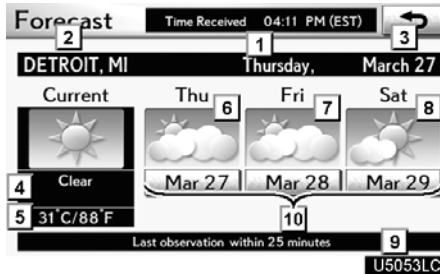

- 1 Received time
- 2 City name
- 3 Today's date
- 4 Current weather
- 5 Current temperature
- 6 Today's weather
- 7 Tomorrow's weather
- 8 Day after tomorrow's weather
- 9 Observed time
- 10 Specified day's weather

 When this button is selected, weather information for a specified day will be displayed.

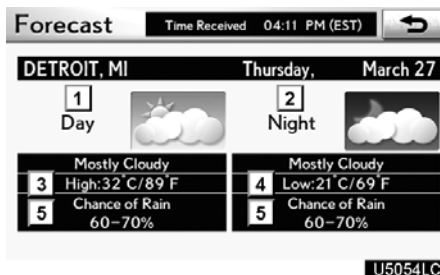

- 1 Daytime weather
- 2 Nighttime weather
- 3 Maximum temperature
- 4 Minimum temperature
- 5 Precipitation probability

● Weather warnings

Weather warnings issued within a 62 mile (100 km) diameter (approximately) around the vehicle are displayed on the warning screen.



 
“Show Map”: When this button is selected, the XM® NavWeather screen will be displayed.

“OK”: When this button is selected, the screen will return to the map of the current location.

When the vehicle approaches the edge of the 15.5 mile (25 km) radius of the current weather-warning zone, the warning screen will be displayed again.

TELEPHONE AND INFORMATION

- **XM® NavWeather indicator**

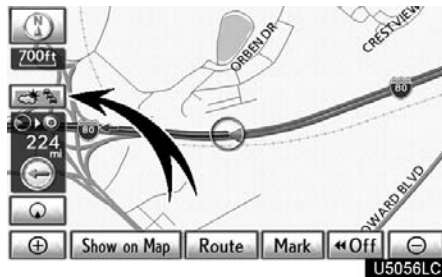

When XM® NavWeather information has been received, the XM® NavWeather indicator will appear on the screen.

While weather warnings are being received the indicator will be lit up in orange.